BergHOFF® grill

Installation & operating instructions

The perfect barbecue!
Model: K 1024A-KC3
Art.: 2415238 BBQ Brevio

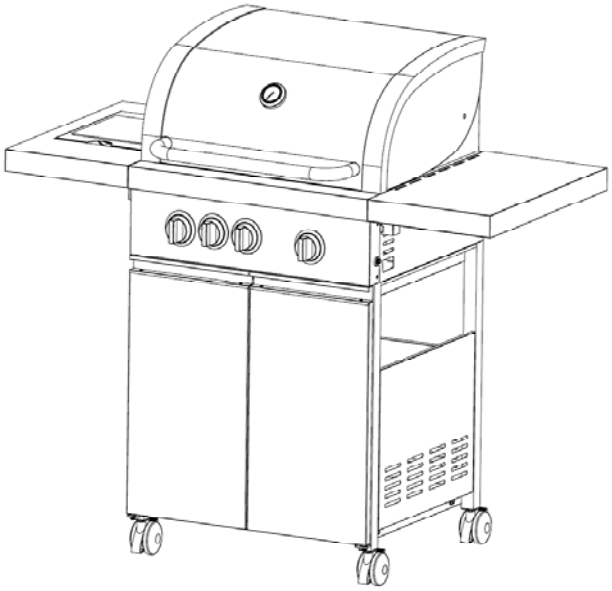

⚠ WARNING
Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Read the installation, operation and maintenance instructions thoroughly before installing or using this equipment.

⚠ DANGER
Not following these instructions could result in fire or explosion, that could cause property damage, personal injury or death.

⚠ DANGER
DO NOT use this barbecue for indoor cooking or heating. TOXIC fumes can accumulate and cause asphyxiation. DO NOT use it in or on boats or recreational vehicles.

⚠ PROP 65 WARNING
Chemicals, known to the state of California, to cause cancer, birth defects or other reproductive harm are created by the combustion of propane.

⚠ WARNING FOR YOUR SAFETY:
for outdoor use only (outside any enclosure)

KEEP THESE INSTRUCTIONS NEAR AT HAND FOR FUTURE REFERENCE. IF YOU HAVE BOUGHT THIS UNIT FOR SOMEONE ELSE, MAKE SURE THAT YOU ALSO GIVE HIM OR HER THIS MANUAL.

Berghoff recommend propane gas as fuel for our BBQ's, as propane supplies the best heating conditions for BBQ's.
Therefore, this BBQ has a gas regulator of 37 mbar.
Although using butane gas by changing the gas regulator is possible, we strongly recommend to stick to propane as the complete manual is based on propane gas.
If you still insist to change to butane gas please contact your local gas specialist for a suitable butane gas regulator (28-30 mbar) and for the correct installation of the regulator.
Note: All defects or problems caused or related to this change to butane gas are not longer part of the product warranty.

IMPORTANT: READ ALL INSTRUCTIONS AND OPERATIONS BEFORE OPERATING THIS UNIT.
FOLLOW ALL STEPS IN ORDER. NEVER ALLOW CHILDREN TO OPERATE THIS UNIT.

WARNINGS

Only to be used outdoors.
Read the instructions before using the appliance.
Accessible parts maybe very hot, keep young children away.
Do not move the appliance during use.
Turn off the gas supply at the gas container after use.
Any modification of the appliance may be dangerous.

ATTENTION:

Some parts of this appliance become
very hot, take special care when children or elderly are present.

FOR YOUR SAFETY:

Do not store or use gasoline or mentholated fuels
or any other flammable vapors and liquids in the
vicinity of this or any other appliance.
Never light a gas grill with gasoline or
comparable fluids!
Suggestion: user should not change the assembly that the manufacturer packaged.

FOR DETAILED SAFETY INFO READ P. 16 POINT 9: GENERAL SAFETY INSTRUCTIONS

1. Technical data

Model: K1024A- KC3 - BergHOFF art. 2415238 BBQ Brevio

Use outdoors only.
Read the instructions before using the appliance.
Warning: accessible parts may be very hot.
Keep young children away.

OUTDOOR GAS GRILL MADE IN CHINA

CE 09 0359

Model: K1024A-KC3B Side burner
Heat input: 10.5 KW Heat input: 3.5 KW
Gas flow: 743 g / h Gas flow: 267 g / h

TOTAL NOMINAL HEAT INPUT $\sum Q_n(H_s)$: 14 KW(1010 g/h)

Country	Category	Gas and Pressure
AT - DE	$I_{3\,B/P}$	Butane (G30) - Propane (G31) 50mbar
FI - SE - NO - DK - NL	$I_{3\,B/P}$	Butane (G30) - Propane (G31) 30mbar
BE - IT - FR - PT - GB - ES	I_{3+}	Butane (G30) 28 - 30mbar, Propane (G31) 37mbar

2. Exploded View

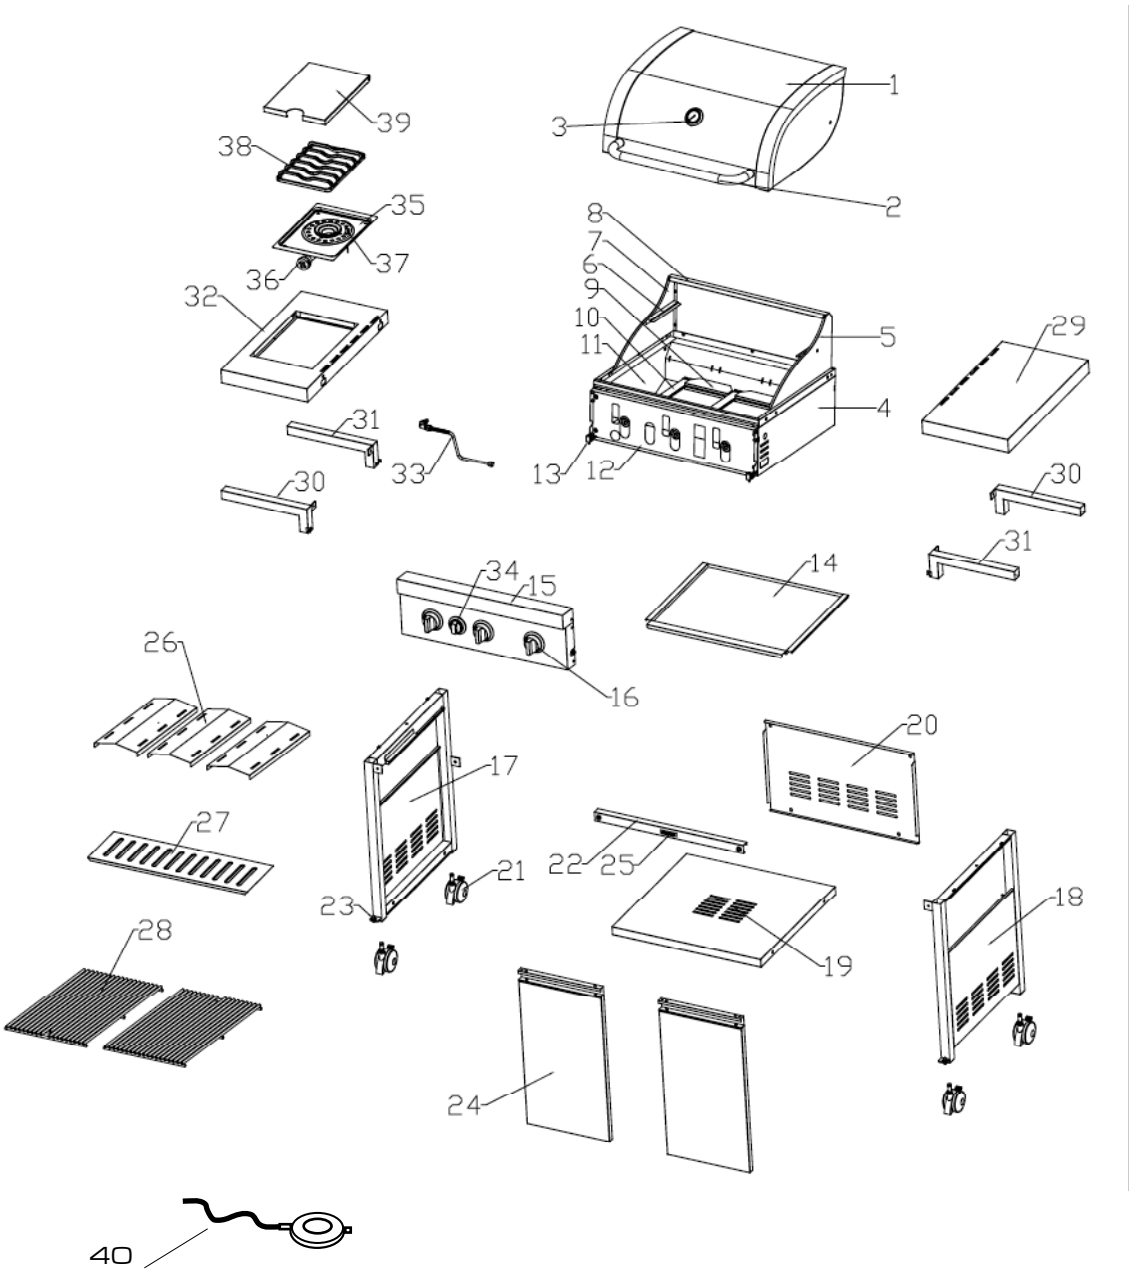

3. Single part list

seq. NO.	appellation	qty	seq. NO.	appellation	qty
1.	lid	1	2.	lid handle	1
3.	thermometer	1	4.	firebox right panel	1
5.	shutter right panel	1	6	warming rack bracket	2
7.	shutter left panel	1	8.	shutter cover board	1
9.	Crossover bracket assembly	4	10.	main burner tube assembly	5
11.	firebox left panel	1	12.	inner control panel	1
13.	Door spring hinge	2	14.	grease tray	1
15.	control panel assembly	1	16.	control knob	3
17.	cart left panel assembly	1	18.	cart right panel assembly	1
19.	cart bottom panel	1	20.	cart back panel	1
21.	wheel	4	22.	cart beam	1
23.	door bottom gemel	2	24.	door assembly	2
25.	door magnet	1	26.	heat distribution panel	3
27.	warming rack	1	28.	cooking grids	2
29.	right side table	1	30.	side table bracket 1	2
31.	side table bracket 2	2	32.	Side burner layer	1
33.	side burn nozzle and hose	1	34	Side burner control knob	1
35.	side burner insert tray	1	36.	die-casting side burner	1
37.	side burner fire cover	1	38	side burner cooking grids	1
39.	side burner cover	1	40.	regulator + hose	1

4. Fixing elements

A	B	C
	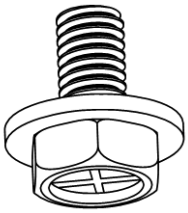	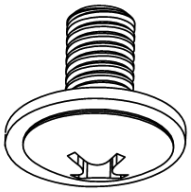
M4X8 screw Ø4 washer	M6X20 hexage screw Plastic washer	M6X20 screw aluminum washer
2 set	10 set	4 set

5. Mounting steps

Make sure your grill is assembled properly. Detailed assembly instructions are packed with each grill giving specific assembly procedures for each model. Follow these instructions carefully to ensure the correct and safe assembly of the grill.

⚠ **CAUTION:** Although we take every effort to ensure that the assembly process is as easy as possible, it is inherent with fabricated steel parts that corners and edged can cause cuts if improperly handled during assembly procedures. Be careful while handling any parts during assembly. It is strongly recommended that you protect hands with a pair of work gloves.

STEP 1:

Use 2x B screws to connect the cart left side panel and cart bottom panel. (See figure 1 for reference)

Figure 1

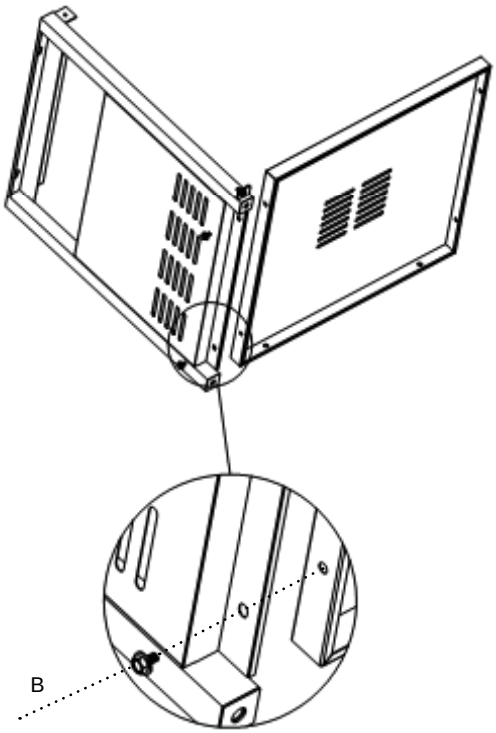

STEP 2:

Use 2x B screws to connect the cart right side panel and cart bottom panel. (See figure 2 for reference)
Figure 2

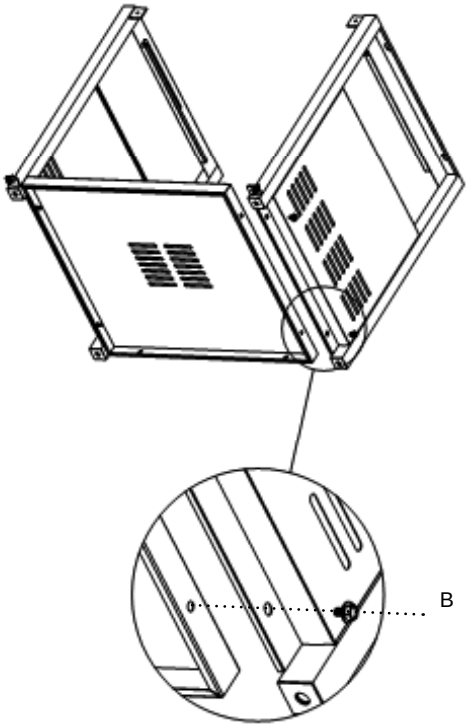

STEP 3:

Use 4x B screws to connect the cart back panel and cart assy. (See figure 3 for reference)
Figure 3

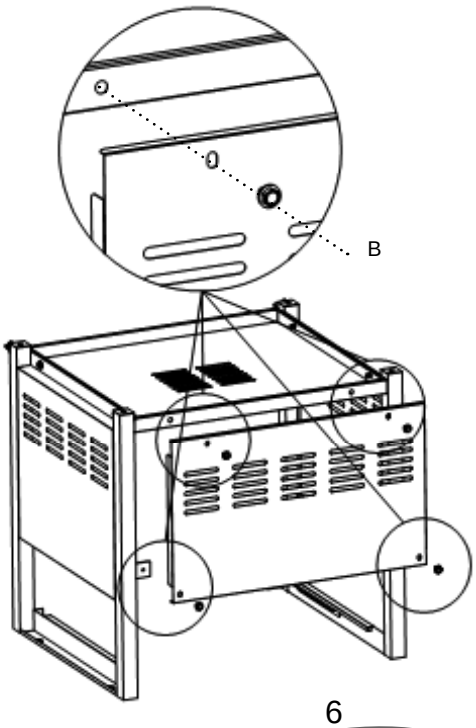

STEP 4:

Fix 4x wheels on the pipes of the cart assy. (See figure 4 for reference)
Figure 4

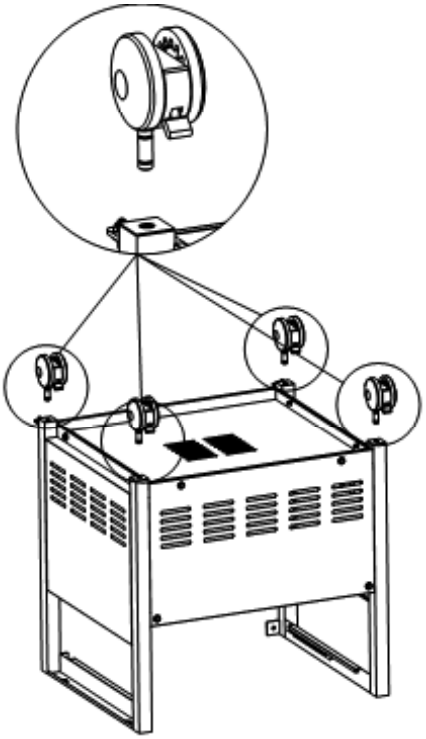

STEP 5:

Use 2x B screws to fix the door beam on the cart assy. (See figure 5 for reference)
Figure 5

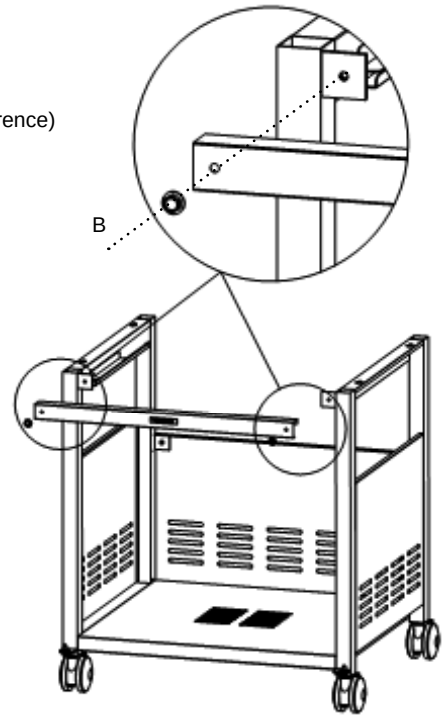

STEP 6:

Utilize the wedges to put the front hood assy on the cart assy. (See figure 6 for reference)
Figure 6

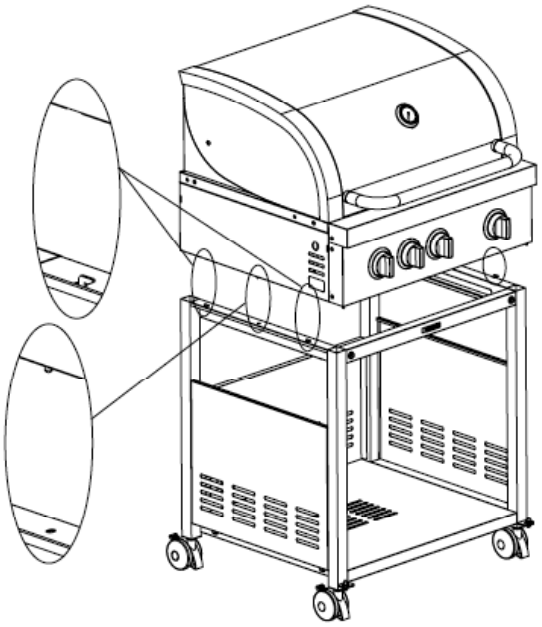

STEP 7:

Put the grease tray into the brace. (See figure 7 for reference)
Figure 7

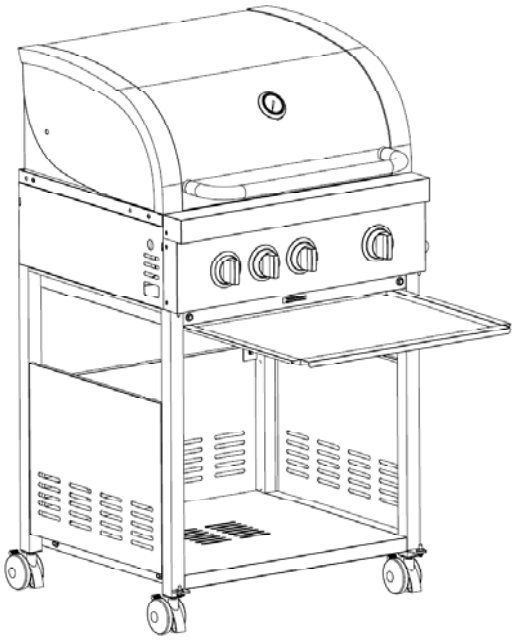

STEP 8:

Assemble 2 doors on the cart assy. Pls note the spring hinges under the control panel , first hold down the spring hinge, then push it into the hole of door. (See figure 8 for reference)

Figure 8

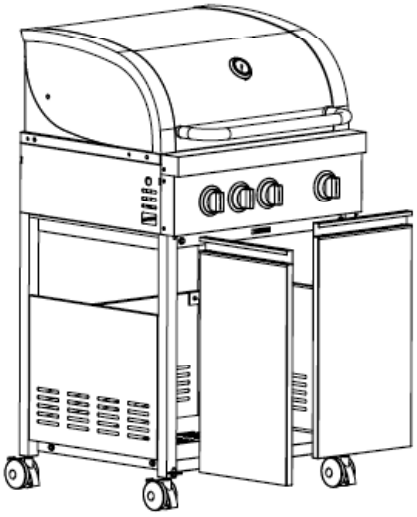

STEP 9:

Put 2 pipes into the right side table . (See figure 9 for reference)

Figure 9

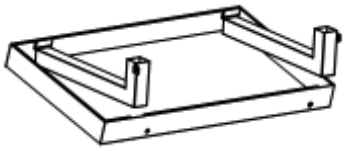

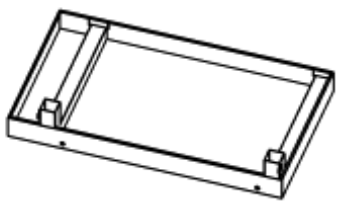

STEP 10:

Utilize the wedges to assemble the right side table assy on the firebox assy. (See figure 10 for reference)
Figure 10

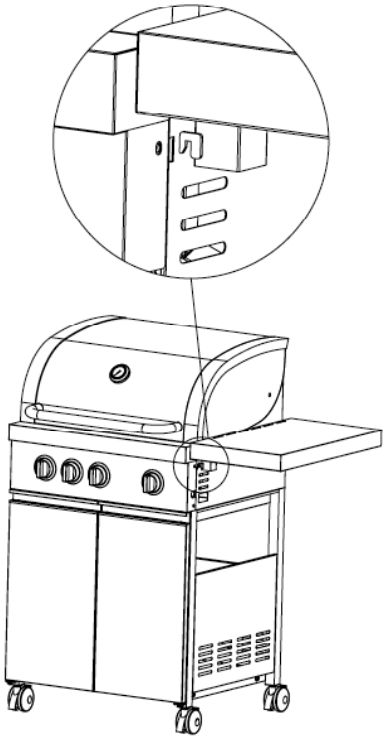

STEP 11:

Use 2x C screws to fix the side table with the firebox firmly. (See figure 11 for reference)
Figure 11

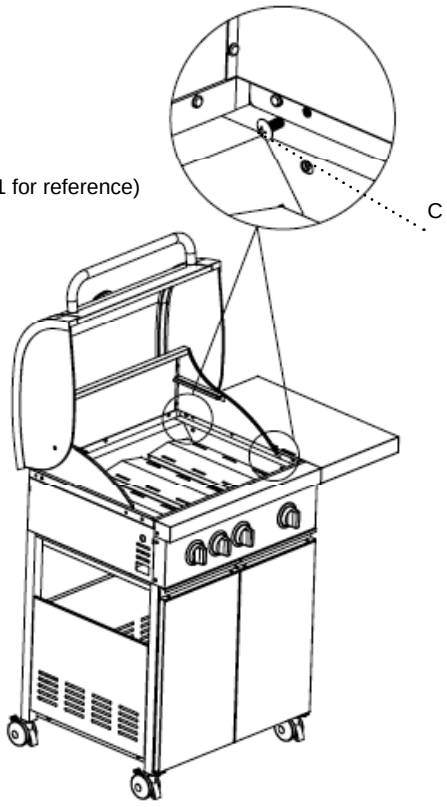

STEP 12:

Put 2 pipes into the left side burner. (See figure 12 for reference)
Figure 12

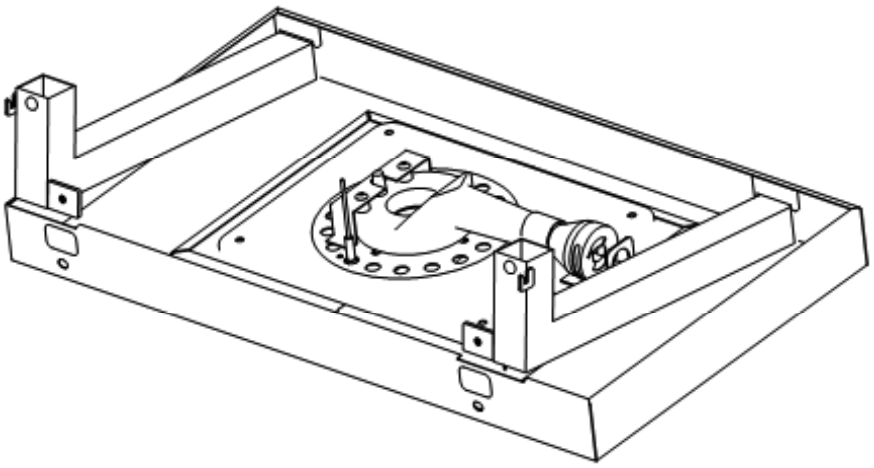

STEP 13:

Utilize the wedges to assemble the left side burner assy on the firebox assy. (See figure 13 for reference)
Figure 13

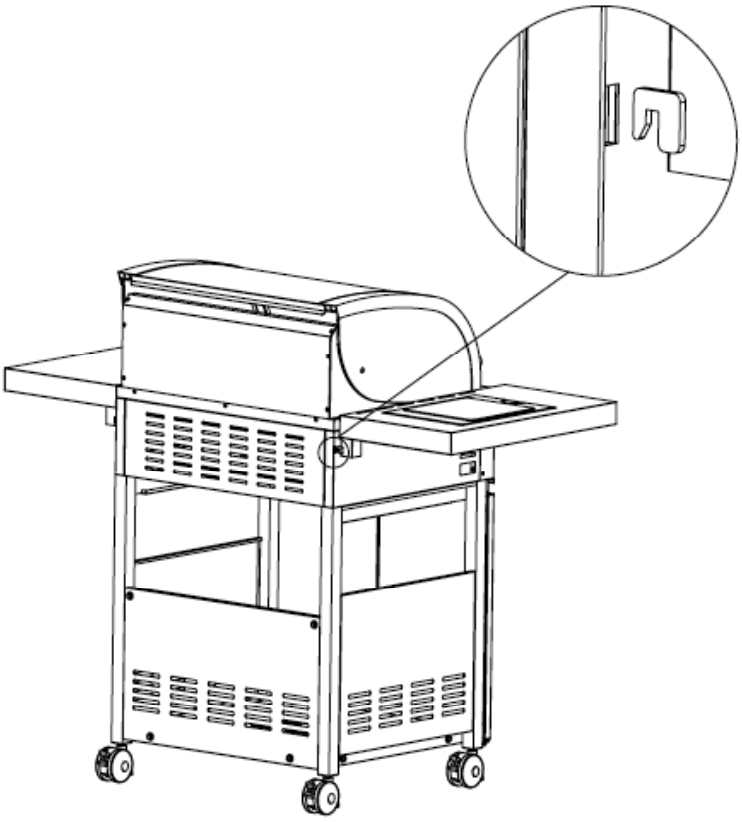

STEP 14:

Use 2x C screws to fix the side burner with the firebox firmly. (See figure 14 for reference)
Figure 14

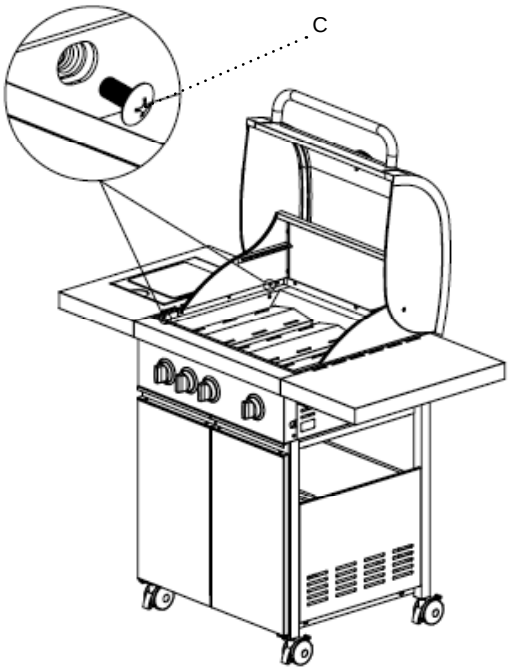

STEP 15:

Use 2x A screws to fix the nozzle of side burner on the side burner insert tray bracket. Remember the nozzle should aim at the gas inner hole. (See figure 15 for reference)
Figure 15

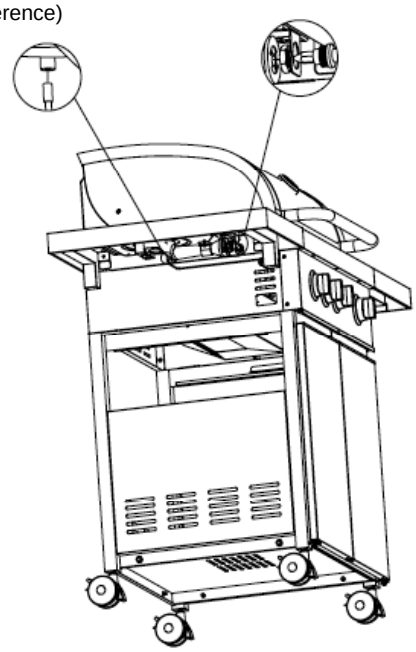

STEP 16:

All assembly is finished. (See figure 16 for reference)
Figure 16

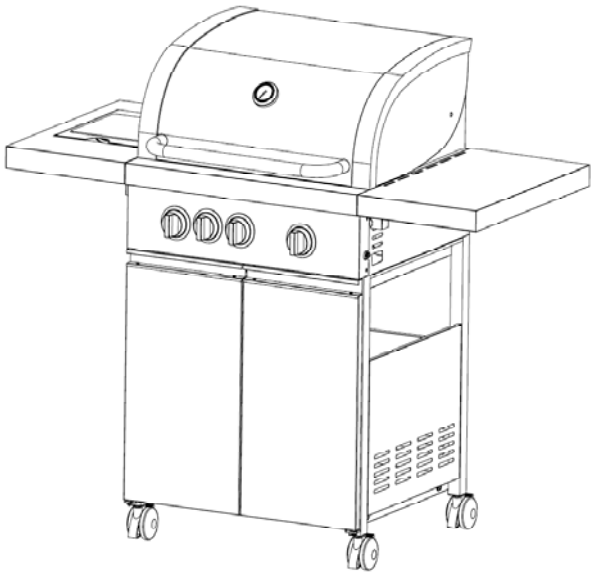

6. Preparation

BergHOFF recommends propane gas as fuel for our BBQ's, as propane supplies the best heating condition for BBQ's. Therefore, this BBQ is equiped with a propane regulator 37 mbar. Not included is the LP gas tank. This can be obtained from your nearest gas retailer. Although using butane gas is possible by adjusting/changing the gas regulator, we strongly recommend to stick to propane gas, as the complete manual is based on the better performing propane gas.
If you still insist on changing to butane gas, please contact your local gas retailer for the adjustment of the existing regulator or for a suitable butane gas regulator (28-30 mbar) and for the correct assembly of the regulator. The regulator and the assembly should comply with EN 12864 (according current version and national regulation.)

⚠ **NOTE:** All defects or problems caused or related to this kind of changes are no longer part of the product warranty.

See point 9 for further general safety instructions.

Energy saving tips:

a) Reduce the opening time of the lid.
b) Turn the grill off as soon as cooking is completed.
c) Preheat the gas grill for 10 to 15 minutes only. (Except for the first use)
d) Do not preheat longer then recommended.
e) Do not use a higher setting than required.
Connect the hose and regulator to the gas container at the right side of the gas grill .Keeping in mind that the gas container must be kept away from heat and in a safe position .The hose dimension is 8mm diameter.

7. Installation

After purchasing your gas bottle you will be ready to set up your gas grill.
a) **Changing the gas bottle shall be carried out away from any source of ignition.** Position the gas bottle at the side of your gas grill, not underneath, keeping in mind that the bottle must be kept away from heat and in a safe position.
We recommend to guide the hose + regulator through the side opening of the cabinet and to connect the LP gas tank standing outside the cabinet (See figure 17)
Figure 17

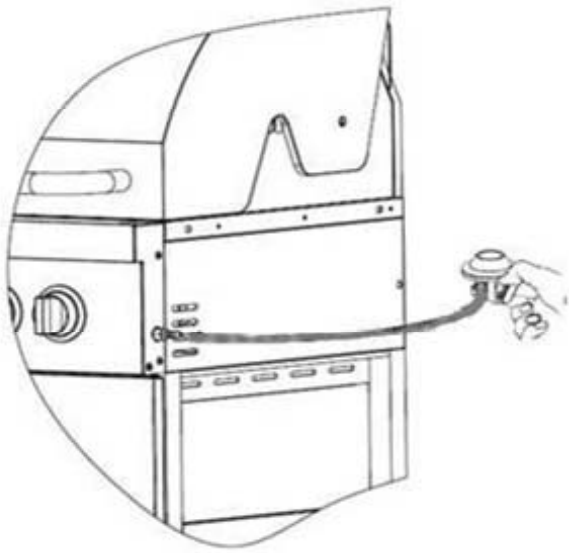

Be sure that:
- The BBQ will not be moved / transported as long as the LP gas tank is connected.
- Nobody can fall over the LP gas tank or damage the hose
- The LP gas tank is always used straight up
- The LP gas tank is not exposed to direct sunlight
- The LP gas tank is immediately turned off after use. The LP gas tank should be disconnected as soon as the BBQ session is completely finished

If you still insist to install the LP gas tank inside the cabinet, be sur that :
- The hose is not touching any hot part of the grill above
- The connection is done as prescribed in this manual
- The hose is still of good quality and no gas leaks occur on the hose or the connection parts
- The LP gas tank is immediately turned off after use. The LP gas tank should be disconnected at the end of the BBQ session and should be removed from the cabinet

b) When ready to use your gas grill, insert the regulator into the gas bottle valve and tighten firmly. **The recommended Length of the hose shall not exceed 1.5m.**

⚠ **WARNING:** Before attempting to light your gas grill you must refer to your lighting instructions and warning / safety points.

Check the hose before each use, searching for cracking, cuts or any abrasions. If the hose is found to be faulty in any way do not attempt to use your gas grill.
When changing your gas bottle, ensure that there are no sources of ignition close by i.e. fires, cigarettes, naked flames etc. Make sure that the appliance is switched off.

Ensure that the hose is not subjected to twisting which will affect the gas flow when using your gas grill. Also the hose must not have undue tension and must not touch any part of the gas grill which may be hot.

Please choose for a flexible hose whose heatproof is higher than 80° C
Best change every 2 years the flexible hose or when the national conditions require it.

8. Connecting the Gas Cylinder

LP (Liquid Propane) Gas Supply Connection

1. Always place the propane cylinder on the tank brackets located on the right side of the cart.
2. Always confirm that all burner control knobs are in the OFF position before activating the gas supply.
3. Before connection, be sure that there is no debris caught in the head of the gas cylinder, head of the regulator valve, or in the head of the burner and burner parts.
4. Always connect the gas supply regulators as follows: Insert the nipple of the valve coupling into the tank valve and tighten the connection collar by turning it clockwise with one hand while holding the regulator with the other hand. (See diagram to right)
5. Disconnect the propane cylinder from the regulator valve when the grill is not in use.
6. Do not obstruct the flow of combustion air and ventilation air to the grill.
7. Keep ventilation openings of the cylinder enclosure free and clear from debris.
8. Place dust cap on cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on cylinder valve outlet that is provided with the cylinder valve. Other types of caps or plugs may result in leakage of propane.

▲ **DANGER**

To prevent fire or explosion hazard when testing for a leak:

1. Always perform the “leak test” before lighting the grill and each time the cylinder is connected for use.
2. Do not smoke or allow other sources of ignition in the area while conducting a leak test.
3. Conduct the leak test outdoors in a well-ventilated area.
4. Do not use matches, lighters or a flame to check for leaks.
5. Do not use grill until all leaks have been stopped, if you are unable to stop a leak, disconnect the propane supply, call for gas appliance service or your local propane gas supplier.

▲ **WARNING:** Always test gas line for leaks at connector with soap water finishing all connections.

Checking for Leaks

1. Make 6-9 cl (2-3 oz.) of leak solution by mixing one part liquid dishwashing soap with three parts water.
2. Make sure control knobs are in the “OFF” position.
3. Spray some solution on the tank valve up to the regulator connection. (See diagram to right).
4. Inspect the solution at the connections for bubbles. lf no bubbles appear, the connection is secure.
5. lf bubbles appear, you have a leak. Go to step 6.
6. Disconnect the regulator from the tank and reconnect.
7. Retest wlth solution.
8. lf you continue to see bubbles, replace the cylinder.

9. General safety instructions

⚠ DANGER

you smell gas -
1. Shut off gas to appliance.
2. Extinguish any open flame.
3. Open lid.
4. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.

⚠ WARNING

FOR YOUR SAFETY

1. Do not store or use gasoline or other flammable liquids or vapors in the vincinity of this or any other appliance.
2. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

⚠ **DANGER: Failure to follow the dangers, warning and cautions in this manual may result in serious body injury or death, or in a fire or an explosion causing damage to property.**

⚠ **WARNING:**

⚠ This grill is for outdoor use only, and shall not be used in a building, garage, or any other enclosed area.

⚠ Do NOT operate, light or use this appliance within 2.5 m/ 8 feet of walls, structures or buildings.

⚠ This grill is NOT for commercial use.

⚠ This grill is for use with liquid propane (LP) gas only. The conversion to or attempted use of natural gas in this LP gas grill is dangerous and will void your warranty.

⚠ LP gas Characteristics:
a. LP gas is flammable and hazardous if handled improperly. Become aware of the characteristics before using any LP gas product.
b. LP gas is explosive under pressure, heavier than air, and settles and pools in low areas.
c. LP gas in its natural state has no odor. For your safety, an odorant is added that smells like rotten cabbage.
d. Contact with LP gas can cause freeze burns to skin.

⚠ LP gas tank needed to operate. Only tanks marked “propane” may be used.

⚠ The LP gas supply tank must be constructed and marked in accordance with the Specifications for LP gas Cylinders of the U.S. Department of Transportation (DOT) or the National Standard of Canada, CAN/CSA-B339, Cylinders, Spheres and Tubes for the Transportation of Dangerous Goods; and Commission or the European Pressure Equipment Derective PED (97/23/EG) and the Directive 2009/105/EC relating to simple pressure vessels.

⚠ LP gas tank must be arranged for vapor withdrawal.

⚠ The LP gas tank must have a listed overfilling prevention device (OPD).

⚠ Only use 20-pound cylinders equipped with a cylinder connection device compatible with the connection for outdoor cooking appliances.

⚠ The LP gas tank must have a tank collar to protect the tank valve.

⚠ Never use an LP gas tank with a damaged body, valve, collar, or footing.

⚠ Dented or rusted LP gas tanks may be hazardous and should be checked by your LP gas supplier prior to use.

⚠ The LP gas tank should not be dropped or handled roughly.

⚠ Tanks must be stored outdoors out of the reach of children and must not be stored in a building, garage, or any other enclosed area. Your tank must never be stored where temperatures can reach over 50°C / 125°F.

⚠ Never keep a filled LP gas tank in a hot car or car trunk. Heat will cause the gas pres sure to increase, which may open the relief valve and allow gas to escape.

⚠ Place dust cap on cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve outlet that is provided with the cylinder valve. Other types of caps or plugs may result in leakage of propane.

⚠ Do not store a spare LP gas tank under or near this appliance.

⚠ Never fill the tank beyond 80 percent full.

⚠ A fire causing serious injury or damage to property may occur if the above is not followed exactly.

⚠ Never attempt to attach this grill to the self-contained LP gas system of a camper trailer, motor home, or house.

⚠ The use of alcohol, or prescription or non-prescription drugs may impair the consumer’s ability to properly assemble or safely operate the appliance.

⚠ Never use charcoal, lighter fluid, lava rocks, gasoline, kerosene, or alcohol with this product.

⚠ Your grill has been checked at all factory connections for leaks. Recheck all connections as described in the “Operating Instructions”section of the manual, as movement in shipping can loosen connections.

⚠ Check for leaks even if your unit was assembled for you by someone else.

⚠ Do not operate if gas leak is present. Gas leaks may cause a fire or explosion.–

⚠ You must follow all leak-checking procedures before operating. To prevent fire or explosion hazard when testing for a leak:
a. Always perform leak test before lighting the grill and each time the tank is connected for use.
b. No smoking. Do not use or permit sources of ignition in the area while conducting a leak test.
c. Conduct the leak test outdoors in a well-ventilated area.
d. Do not use matches, lighters, or a flame to check for leaks.
e. Do not use grill until any and all leaks are corrected.
If you are unable to stop a leak, disconnect the LP gas supply. Call a gas appliance serviceman or your local LP gas supplier.

⚠ Do not store or use gasoline or other flammable liquids or vapors within 25 feet (8 m) of this appliance.

⚠ Do not use in an explosive atmosphere. Keep grill area clear and free from combustible materials, gasoline and other flammable vapors and liquids.

⚠ Minimum clearance from sides and back of unit to combustible construction, 60cm (21 inches) from side and 60 cm (21 inches) from back. Do not use this appliance under overhead combustible surfaces.

⚠ It is essential to keep the grill’s valve compartment, burners, and circulating air passages clean. Inspect grill before each use.

⚠ Do not alter grill in any manner.

⚠ Do not use the grill unless it is COMPLETELY assembled and all parts are securely fastened and tightened.

⚠ This grill should be thoroughly cleaned and inspected on a regular basis. Clean and inspect the hose before each use of the appliance. If there is evidence of abrasion, wear, cuts, or leaks, the hose must be replaced prior to the appliance being put into operation.

⚠ Use only the regulator and hose assembly provided. The replacement regulator and hose assembly shall be that specified by the manufacturer.

⚠ Do not use this appliance without reading “Operating Instructions” in this manual.

⚠ Do not touch metal parts of grill until it has completely cooled (about 45 min.) to avoid burns, unless you are wearing protective gear (pot holders, gloves, BBQ mittens, etc.).

⚠ When cooking, fire extinguishing materials shall be readily accessible. In the event of an oil grease fire, do not attempt to extinguish with water. Use type BC dry chemical fire extinguisher or smother with dirt, sand or baking soda.

⚠ Do not install or use in or on boats or recreational vehicles.

⚠ Do not use grill in high winds.

⚠ Never lean over the grill when lighting.

⚠ Do not leave a lit grill unattended, especially keep children and pets away from grill at all times.

⚠ Do not attempt to move grill when in use. Allow the grill to cool before moving or storing.

⚠ Storage of grill indoors is permissible only if the tank is disconnected, removed from the grill and properly stored outdoors.

⚠ Always open grill lid carefully and slowly as heat and steam trapped within grill can severely burn you.

⚠ Do not attempt to disconnect the gas regulator from the tank or any gas fitting while the grill is in use.

⚠ Always place your grill on a hard non-combustible, level surface. An asphalt or blacktop surface may not be acceptable for this purpose.

⚠ Move gas hoses as far away as possible from hot surfaces and dripping hot grease.

⚠ Keep all electrical cords away from a hot grill.

⚠ Do not use grill for indoor cooking or heating. TOXIC fumes can accumulate and cause asphyxiation/suffocation.

⚠ After a period of storage and/or nonuse, check for leaks, burner obstructions and inspect for any abrasion, wear, cuts to the hose.

⚠ Failure to open lid while igniting the grill’s burners, or not waiting 5 minutes to allow the gas to clear if the grill does not light, may result in an explosive flame-up.

⚠ If grill is not in use, the gas must be turned off at the supply tank.

⚠ Never operate grill without heat plates installed.

⚠ Always use a meat thermometer to ensure food is cooked to a safe temperature.

⚠ Please use protective gloves when assembling this product.

⚠ Do not force parts together as this can result in personal injury or damage to the product.

⚠ Never cover entire cooking area with aluminum foil.

⚠ Deaths, serious injury or damage to property may occur if the above is not followed exactly.

⚠ We would recommend that this gas grill be serviced by your local gas retail outlet at least once a year by a competent engineer. Do not attempt to service this appliance yourself.

⚠ **Any modification of the appliance may be dangerous.** Do not attempt any unauthorized interference of the main controls on this gas grill, i.e. gas taps, injectors, valves etc.

Figure 18

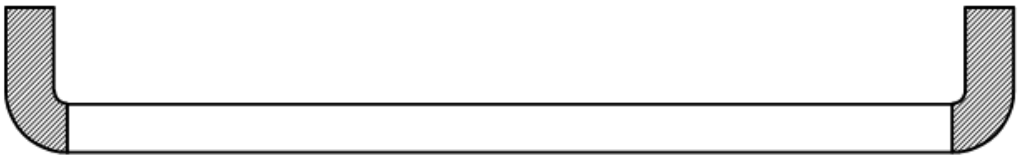

⚠ **WARNING:** The Handle Black Area (See Above Picture for Reference) Will Become Hot When the Gas grill In Use, BE CAREFUL! Do Not Touch The Black Area.

This gas grill is designed to use under different gas pressure, the following information is regarding the relationship.
Figure 19

GAS PRESSURE	ORIFICE DIMENSION(mm)	
	MAIN BURNER	SIDE BURNER
	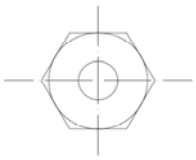	
30mbar	0.9 mm	0.9 mm
50mbar	0.8 mm	0.8 mm

10. Safety precautions

a) Always test gas line for leaks at connector with soapy water after making connections.
b) The top lid must always be open when lighting the burner.
c) Use oven gloves and sturdy, long handled gas grill tools when cooking on the grill.
d) Be prepared if an accident or fire should occur. Know where the first aid kit and fire extinguishers are and know how to use them.
e) Keep any electrical supply cord and the fuel supply hose away from any heated surfaces.
f) Always cook with great care.

11. Lighting instructions

⚠ **CAUTION:** The lid must be open when lighting the burner! Do not stand with your face directly over the gas grill when lighting it.Your gas grill will have the following method of ignition:

Pilot Gas Control Ignition:

Put all gas controls (knobs) on the Gas grill in the “OFF” position, turn the gas cylinder valve to the on position at the regulator.
To create a spark you must push the control knob in (A) and hold in this position for 3-5 seconds to allow gas flow and then turn anticlockwise to” HIGH” (B). It can spark to the burner lighting tube (C). You will hear a “snap” from the igniter and you will also see a 3”-5” (7 - 13 cm) orange flame coming from the burner lighting tube at the left side of the burner (D).
Continue to hold the burner control knob in for two seconds after the “snap”, this will allow gas to flow completely down the burner tube (E) and insure ignition.
When the burner is alight, adjacent burners will cross light when their controls are turned to “HIGH”
At “High” setting the burner flame should be approximately 12-20mm long with a minimum of orange flame. Turn the gas control fully anticlockwise for minimum setting.
Should you have any difficulty lighting your gas grill following the above steps, contact your dealer for advice.

⚠ **WARNING:** If the burner still does not light ,turn the burner control knob to” OFF” and wait 5 minutes to let the gas clear before lighting again.

Figure 20

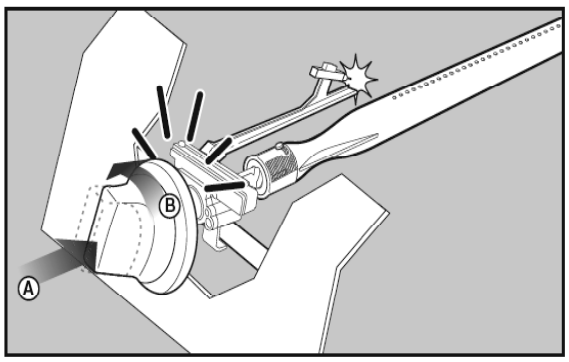

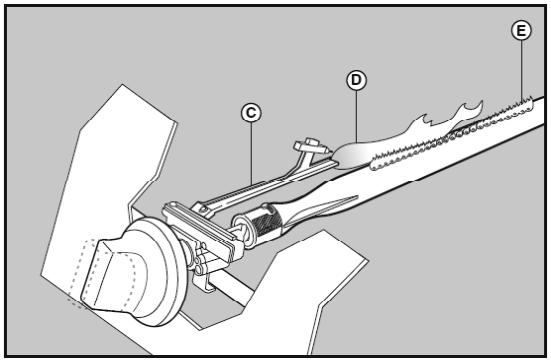

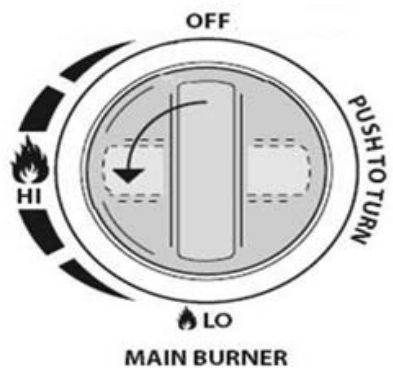

12. Storage

Your Gas Bottle must be stored outdoors in a well ventilated area and must be disconnected from your gas grill when not being used. Ensure that you are outdoors and away from any sources of ignition before attempting to disconnect your gas bottle from your gas grill.
When you are using your gas grill after a period of storage, please ensure to check for gas leaks and check for any obstructions in the burner etc. before using. Also follow the cleaning instructions to ensure gas grill is safe.
If gas grill is stored outdoors ensure to check that all areas under the front panel are free from any obstructions (insects etc.) This area must be kept free as this may affect the flow of combustion or ventilation air.

13. Cleaning instructions

Maintenance is recommended every 90 days for your gas grill, but it is absolutely
necessary to perform maintenance at least once a year. By doing so you will extend the life of your gas grill.

Your gas grill is easy to clean with minimum effort, just follow these helpful hints for cleaning convenience.

Trouble Shooting		
Problem	**Possible Cause**	**Solution**
Burners will not light using The ignition system	LP gas cylinder empty Faulty regulator or replaced Obstructions in burners Obstructions in gas jets or hose.	Replace with full cylinder Have regulator checked or replaced Clean burners Clean jets and hose
Low flame or flashback (fire in burner tube-a hissing or roaring noise may be heard)	Obstructions in burners Obstructions in gas jets or hose. Windy conditions.	Clean burners Clean jets and hose Use BBQ in a more sheltered spot
Gas valve knob difficult to turn.	Gas valve jammed	Replace gas valve

If your problem is not resolved from the information above, please contact your local Gass Retailer.
a)Turn the burner on for 15 to 20 minutes. Grease drippings will be burned off from your grill as well as your lava rock. Ensure appliance is cold before continuing.
b) Grids should be cleaned periodically by soaking and washing in soapy water.
c) The interior surfaces of the grill housing cover should also be washed with hot, soapy water. Use a wire brush, steel wool or a scouring pad to remove stubborn spots.
d) Periodically check the burner to see that it is free from insects and spiders which may clog the gas system, deflecting gas flow. Ensure to clean venturi pipes on burner very carefully, make sure that there are no obstructions. We recommend that you use a pipe cleaner to clean the venturi pipe area.
e) Any modifications of this appliance may be dangerous and are not permitted.

14. Gas grill Safety Hints

Position your gas grill on a safe level surface, away from inflammable items such as wooden fences or overhanging tree branches.
Never use your gas grill indoors!
Once lit do not move your gas grill or leave it unattended.
Keep children and pets at a safe distance from the gas grill.
Keep a fire extinguisher handy.
The gas grill will become hot when in use, so handle lids etc. with the help of gloves.
Ensure that the appliance has completely cooled down before storing.

Use outdoors only!
Read the instructions before using the gas grill.
Assessable parts may be very hot, Keep young children away!
Do not move the gas grill during use.
Turn off the gas supply at the gas container after use.
Any modification of the appliance may be dangerous and be not permitted.

15 Limited Warrenty

BergHOFF Worldwide (“Vendor”) warrants to the original retail purchaser of this product, and to no other person, that if this product is assembled and operated in accordance with the printed instructions accompanying it, then for a period of ten (10) years for the burners; two (2) years for all the stainless steel parts; and one (1) year for all remaining parts from the date of purchase, all parts in such product shall be free from defects in material and workman ship. Vendor may require reasonable proof of your date of purchase. Therefore, you should retain your sales slip or invoice. This Limited Warranty shall be limited to the repair or replacement of parts, which prove defective under normal use and service and which Vendor shall determine in its reasonable discretion upon examination to be defective. Before returning any parts, you should contact Vendor’s Customer Service Department using the contact information listed below. If Vendor confirms, after examination, a defect covered by this Limited Warranty in any returned part, and Vendor approves the claim, Vendor will replace such defective part without charge. If you return defective parts, transportation charges must be prepaid by you. Vendor will return replacement parts to the original retail purchaser, freight or postage prepaid.
This Limted Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance or service by you or any third party, or failure to perform normal and routine maintenance on the product as set out in this owner’s manual. In addition, the Limited Warranty does not cover damage to the finish, such as scratches dents discoloration, rust or other weather damage, after purchase.
This Limited Warranty is in lieu of all other express warranties. Vendor disclaims all warranties for products that are purchased from sellers other than authorized retailers or distributors, including the warranty of merchantability or the warranty or the warranty of fitness for a particular purpose.
VENDOR ALSO DISCLAIMS AND ANY ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. VENDOR SHALL NO LIABILITY TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.
Vendor further disclaims any implied or express warranty of, and assumes no responsibility for, defects in workmanship caused by third parties.
This Limited Warranty gives the purchaser specific legal rights; a purchaser may have other rights depending upon where he or she lives. Some jurisdictions do not allow the exclusion or limitation of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitations may not apply to everyone.
Vendor does not authorize any person or company to assume for it any other obligation or liability connection with the sale, installation, use, removal, return, or replacement of its equipment, and no such representations are binding on Vendor.

© 2010 BERGHOFF WORLDWIDE N.V., BELGIUM